



## Serie 9000

2 - ramenné stahováky

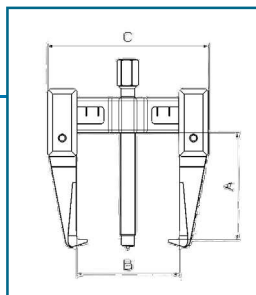

Ref.	A	B	C	⚖️	🔧	🔪
9002	80	80	121	0,7	900203	900250
9002L	130	80	121	0,8	900203	900260
9002A	80	120	161	0,7	900203	900250
9002LA	130	120	161	0,8	900203	900260
9010	160	160	221	2,7	901003	901050
9010L	215	160	221	3,0	901003	901060
9010A	160	220	271	2,8	901003	901050
9010LA	215	220	271	3,1	901003	901060

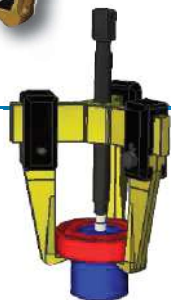

## Serie 9000T


3 - ramenné stahováky



Ref.	A	B	C	⚖️	🔧	🔪
9002T	80	80	121	0,9	900203	900250
9002LT	130	80	121	1,1	900203	900260
9002AT	80	120	161	1,0	900203	900250
9002LAT	130	120	161	1,2	900203	900260
9010T	160	160	221	3,9	901003	901050
9010LT	215	160	221	4,4	901003	901060
9010AT	160	220	271	4,3	901003	901050
9010LAT	215	220	271	4,5	901003	901060

### Náhradní díly

### Serie 9000

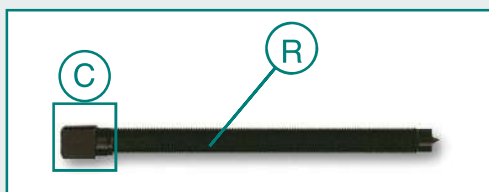

Vřeteno

	R	C
900203	M12 x 1,75 x 145	⬡ 14
901003	M18 x 2,50 x 230	⬡ 22

+ Všechny verze

### Čelisti

900250	
900260	
901050	
901060	



Obsahuje šroub i podložku

### Sada

Sleva



Ref.	⚖️	
9000A	9002 - 9002L 9002LA - 9010 9010LA	11,5
9000B	9002 - 9002LA 9010 - 9010L 9010LA	14,0